




OPERATING PROCEDURES FOR TAYLOR MODEL 794

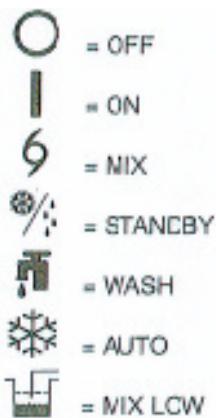

SYMBOL DEFINITIONS

Auto- The snowflake symbol is used to freeze barrels.

Wash- The faucet symbol is used when cleaning the machine. The STANDBY or AUTO modes must be cancelled first to activate WASH mode.

Standby- The snowflake/raindrop symbol is used when serving is completed for the day. Also known as overnight mode.

ASSEMBLY & FILLING (*typically done on Mondays*)

- 1) Assemble all parts, ensuring that you lubricate all moving parts and o-rings, including drive shafts and boot seals.
- 2) Fill a large bucket with warm water and Stera Sheen sanitizer. Pour solution equally into both hoppers. Check for any leaks and use the large brush to clean hoppers. Turn machine ON with the main power switch and then press the WASH (faucet symbol) on both sides. Sanitize for 5 minutes in WASH mode.
- 3) Drain the sanitizer solution while in WASH mode. After the water is completely drained, press the WASH keys to cancel the operation.
- 4) Fill hoppers with a minimum of 1 full bag of mix per side. The mix must be completely **THAWED (no ice crystals)**. **FEED TUBES SHOULD NOT BE INSTALLED WHEN FILLING THE MACHINE**. Once hoppers are properly filled, wait until the bubbling in the hoppers stops, and then install feed tubes- **SMALL HOLE SIDE DOWN INTO THE MIX**.
- 5) Press the Snowflake key on both sides. The compressor will engage and start to freeze down the mix.

DISASSEMBLY & CLEANING (*typically done on Fridays*)

- 1) Press the WASH keys on both sides. Remove the hopper covers and feed tubes, and take to the sink for cleaning.
- 2) While holding down one or all three draw handles, drain the mix from the machine.
- 3) Fill a large bucket with cool water. Pour water equally into both hoppers and drain. Repeat until the rinse water becomes clear.
- 4) Mix 2 gallons of warm water with 2 oz of Stera Sheen sanitizer and stir solution with the large brush. Pour solution equally into both hoppers. Brush clean hoppers and sanitizer for 5 minutes in WASH mode.
- 5) Drain sanitizer solution while in WASH mode. After water is completely drained, press the WASH keys to cancel operation.
- 6) Turn the machine off with the main power switch and then remove the door screws and take off the freezer door/faceplate.
- 7) Remove the beaters and drive shafts, and take all parts to the sink for washing. Use warm, soapy water and let the parts air dry.

NOTES- RESET BUTTONS ARE LOCATED ON THE FRONT LOWER. SCRAPER BLADES MUST BE CHANGED EVERY 2-3 MONTHS, DEPENDING ON VOLUME, TO MAINTAIN PRODUCT QUALITY.

**PLEASE CONTACT ANNIE'S FOR TROUBLESHOOTING, PARTS & SERVICE CALLS
(800) 969-9648**