 




OPERATING PROCEDURES FOR TAYLOR MODEL C713



= AUTO



= WASH



= MIX LOW



= MIX OUT



= MENU DISPLAY



= STANDBY



= SELECT



= ON



= OFF



= UP ARROW



= DOWN ARROW

SYMBOL DEFINITIONS

Auto- The snowflake symbol is used to freeze barrels.

Wash- The faucet symbol is used when cleaning the machine. The STANDBY or AUTO modes must be cancelled first to activate WASH mode.

Standby- The ice cream cone/raindrop symbol is used when serving is completed for the day. Also known as overnight mode.

ASSEMBLY & FILLING (*typically done on Mondays*)

- 1) Assemble all parts, ensuring that you lubricate all moving parts and o-rings, including drive shafts and boot seals.
- 2) Fill a large bucket with warm water and Stera Sheen sanitizer. Pour solution equally into both hoppers. Check for any leaks and use a large brush to clean hoppers. Turn machine ON with the main power switch and then press the WASH (faucet symbol) on both sides. Sanitize for 5 minutes in WASH mode.
- 3) Drain the sanitizer solution while in WASH mode. After the water is completely drained, press the WASH keys to cancel the operation. The display screen should read **"UNIT CLEANED"**. Do NOT add product if any error messages are displayed!
- 4) Fill hoppers with a minimum of 1 full bag of mix per side. The mix must be completely **THAWED (no ice crystals)**. **FEED TUBES SHOULD NOT BE INSTALLED WHEN FILLING THE MACHINE.** Once hoppers are properly filled, wait until the bubbling in the hoppers stops, and then install feed tubes- **SMALL HOLE SIDE DOWN INTO THE MIX.**

- 5) Press the Snowflake key on both sides. The compressor will engage and start to freeze down the mix.

DISASSEMBLY & CLEANING (*typically done on Fridays*)

- 1) Press the WASH keys on both sides. Remove the hopper covers and feed tubes, and take to the sink for cleaning.
- 2) While holding down one or all three draw handles, drain the mix from the machine.
- 3) Fill a large bucket with cool water. Pour water equally into both hoppers and drain. Repeat until the rinse water becomes clear.
- 4) Mix 2 gallons of warm water with 2 oz of Stera Sheen sanitizer and stir solution with the large brush. Pour solution equally into both hoppers. Brush clean hoppers and sanitizer for 5 minutes in WASH mode.
- 5) Drain sanitizer solution while in WASH mode. After water is completely drained, press the WASH keys to cancel operation.
- 6) **TURN THE MACHINE OFF WITH THE MAIN POWER SWITCH**, then remove the door screws and take off the freezer door/faceplate. *The freezer door must be removed for at least 5 minutes, or machine will go into Lock Out mode.*
- 7) Remove the beaters and drive shafts, and take all parts to the sink for washing. Use warm, soapy water and let the parts air dry.

NOTES- RESET BUTTONS ARE LOCATED ON THE LEFT SIDE PANEL TOWARDS THE REAR OF THE MACHINE.

Reset the machine if "BTR OVERLOAD" is displayed or if there is a power failure.

SCRAPER BLADES MUST BE CHANGED EVERY 2-3 MONTHS, DEPENDING ON VOLUME, TO MAINTAIN PRODUCT QUALITY.

PLEASE CONTACT ANNIE'S FOR TROUBLESHOOTING, PARTS & SERVICE CALLS (800) 969-9648